


3-Spoke Net Deck Install Instructions

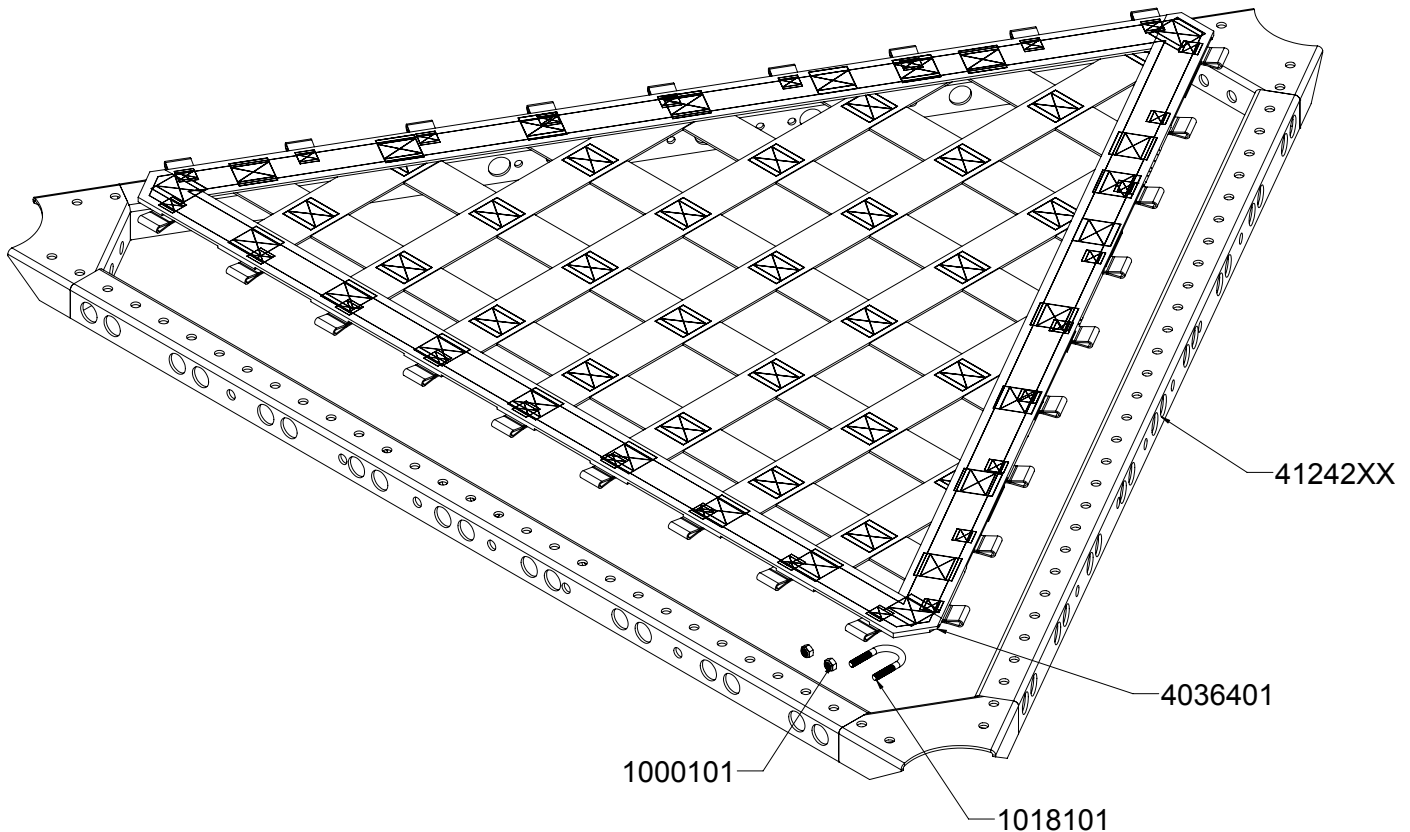

Locate net deck hardware package (4171601).

Place one u-bolt (1018101) into each tab on the net (403640). Place the net into the deck frame (41242XX) and insert the u-bolts into the holes in the frame. Secure each u-bolt using two nuts (1000101). Tighten all of the u-bolts evenly until net is taut.

Please refer to Fusion 3 Spoke Frame assembly guide for instructions on attaching the assembled deck to the frame.



Xccent Play - www.xccentplay.com
5240 257th St, Wyoming, MN 55092
(800) 933-4748 Fax: (651) 462-9299