


# 3-Spoke Solid Deck Install Instructions

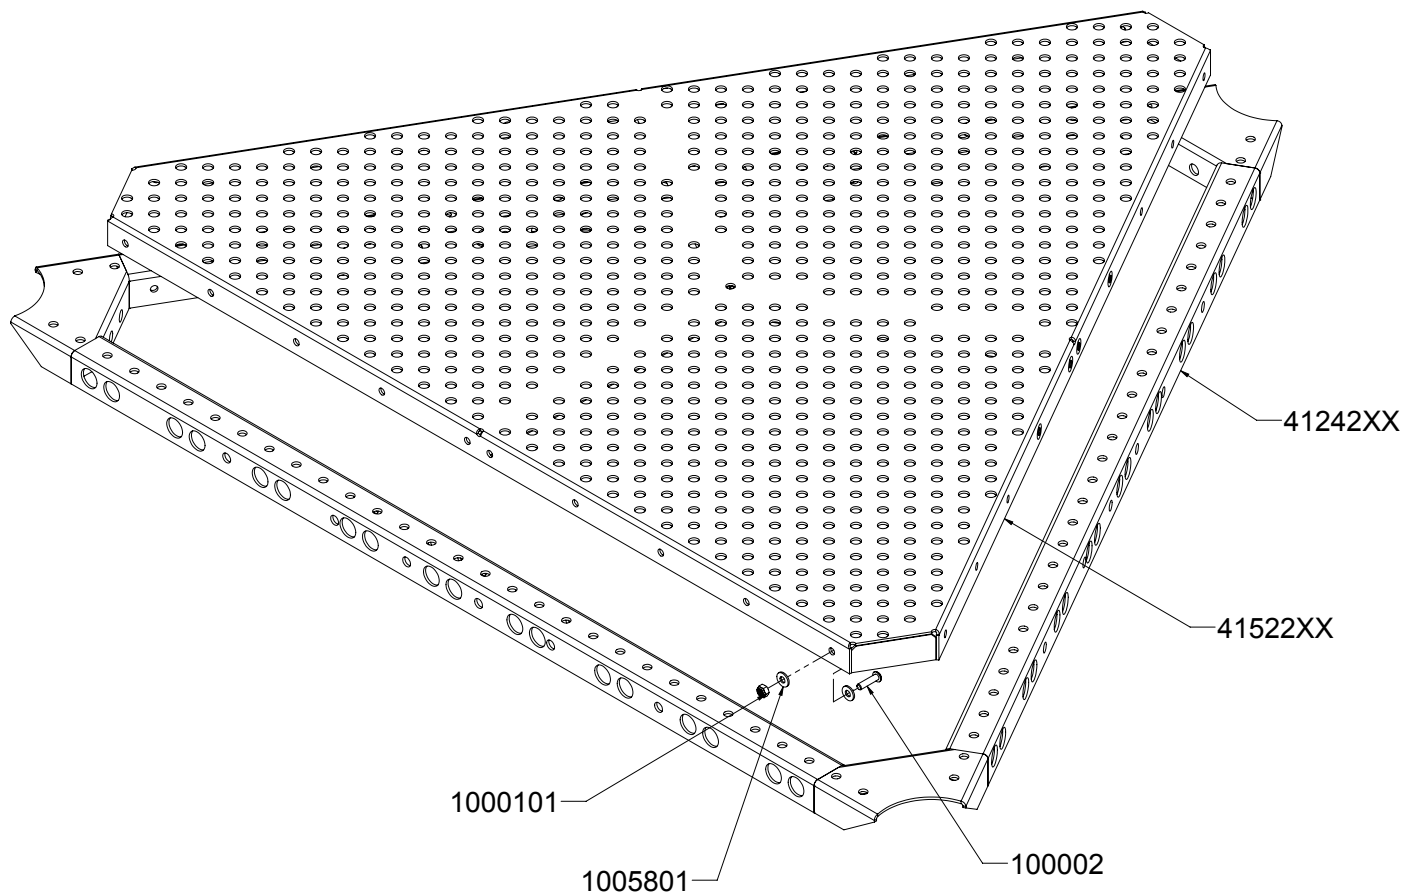

Locate solid deck hardware package (4150201).

Place the solid deck insert (41522XX) into the deck frame (41242XX). Align the holes in the solid deck and frame and insert one 1/4"-20 x 1" BHCS (1027001) with a flat washer (1005801) through every other hole. Secure the bolts with a washer and nylock nut (1000101). Once all bolts are inserted, tighten all nuts to secure the deck.

Please refer to Fusion 3 Spoke Frame assembly guide for instructions on attaching the assembled deck to the frame.



Xccent Play - [www.xccentplay.com](http://www.xccentplay.com)  
5240 257th St, Wyoming, MN 55092  
(800) 933-4748 Fax: (651) 462-9299