


Ion Teardrop Handles Install Instructions

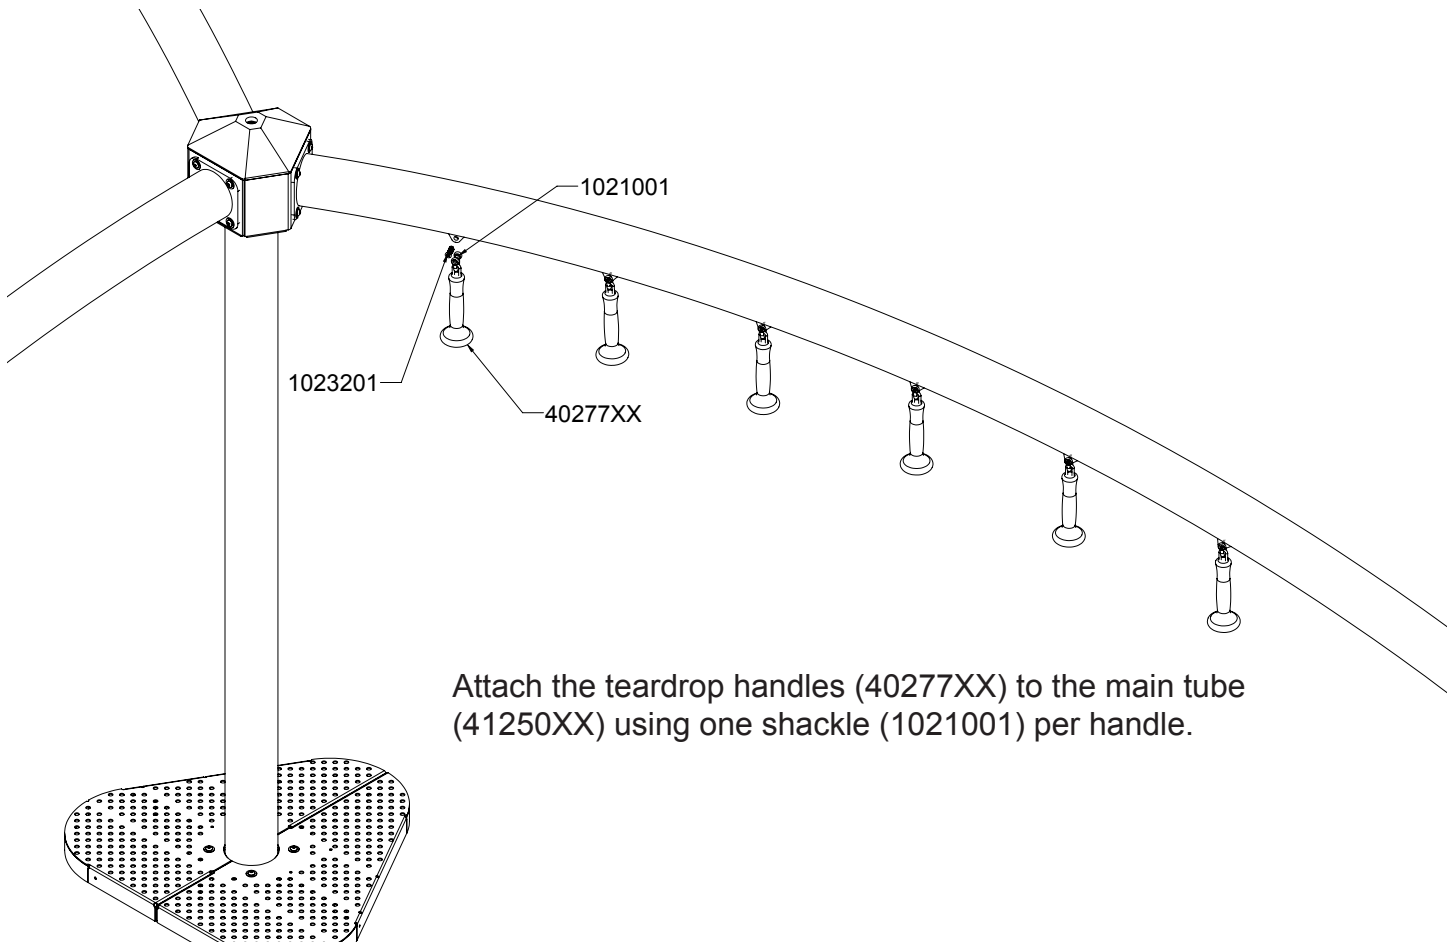

Attach the teardrop handles (40277XX) to the main tube (41250XX) using one shackle (1021001) per handle.

Xccent Fastener Torque	
Size	ft-lbs
1/4"-20	6
5/16"-18	12
3/8"-16	20
1/2"-13	40

Ion Tools List

- Torque Wrench
- 9/16" socket and ratchet
- 3/4" socket and ratchet
- 1-1/8" socket and ratchet
- T40 tamper resistant Torx driver
- T45 tamper resistant Torx driver
- Standard allen wrench set



Xccent Play - www.xccentplay.com
 5240 257th St, Wyoming, MN 55092
 (800) 933-4748 Fax: (651) 462-9299